



Part No. B-35316-5 12 Inch Bolt.
Used with Part No. HD-39302.

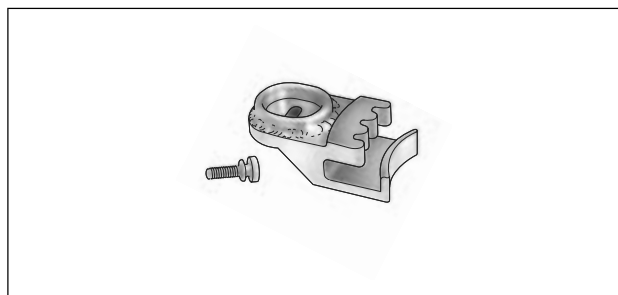


Part No. B-43982 Sprocket Locking Tool

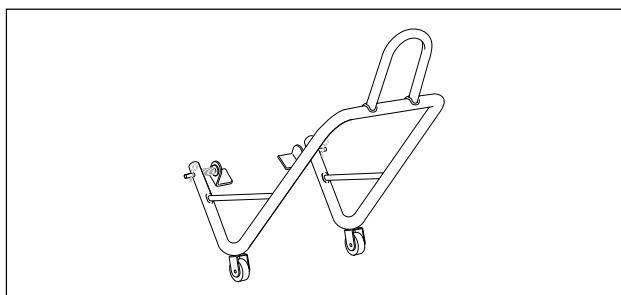


Part No. B-41174 Rear Wheel Support Stand and
Part No. B-41174-2 Replacement Pad.




Part No. B-43983 Main Drive Gear Cross Plate.
Used with Part No. HD-35316A.

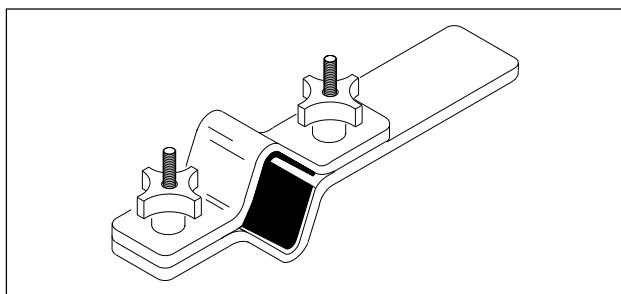


Part No. B-41177 Front Fork Holding Tool

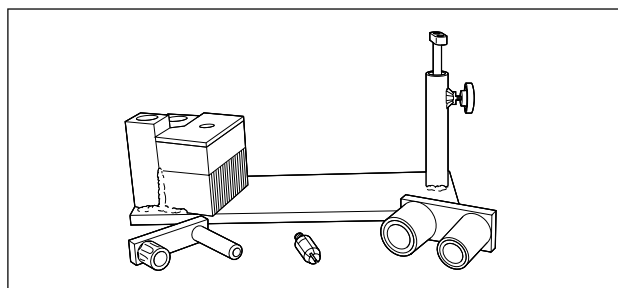


Part No. B-43985 Transmission Remover/Installer

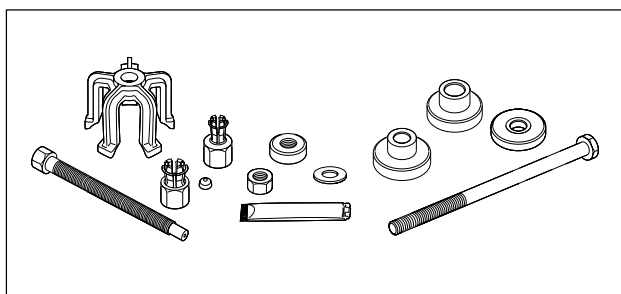


Part No. B-43933 Wheel Bearing Remover/Installer.
Use with Part No. HD-44060.

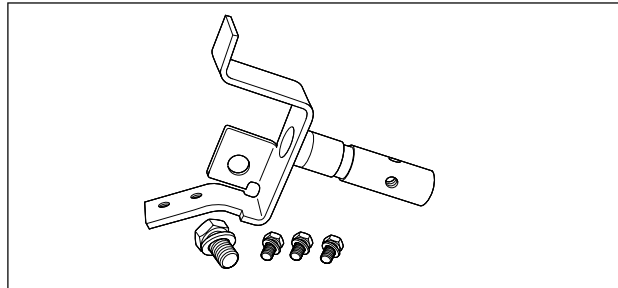


Part No. B-43987 Engine Cradle
Used with HD-42310

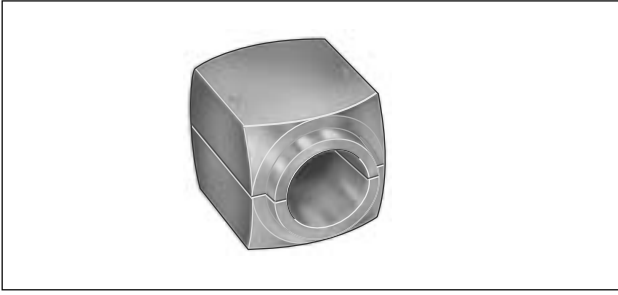


Part No. B-43991 Fork Seal/Bushing Driver

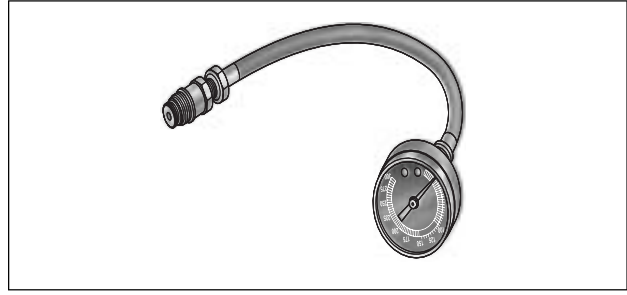

Part No. HD-33223-1 Cylinder Compression Gauge

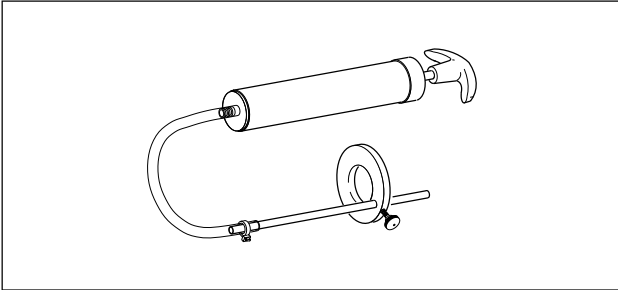


Part No. B-59000A Pro Level Oil Gauge

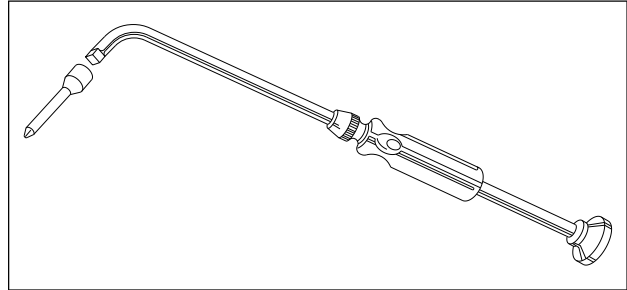


Part No. HD-33413-A Carburetor Idle Adjustment Tool




Part No. HD-25070 Robinair Heat Gun

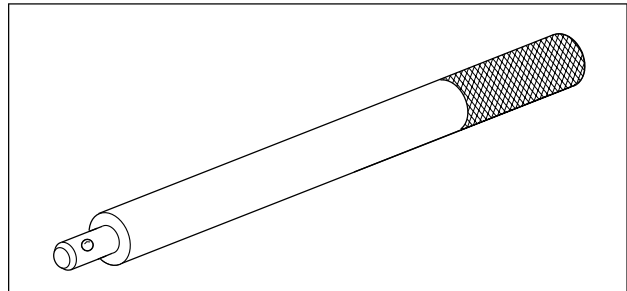


Part No. HD-33416 Universal Driver Handle

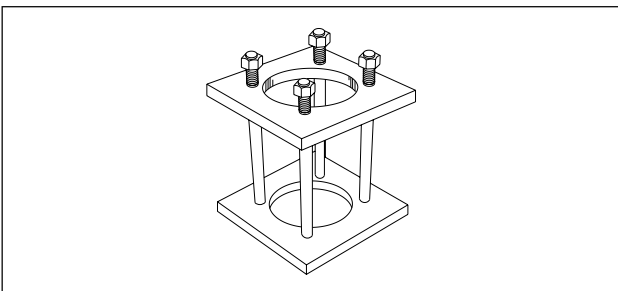


Part No. HD-33446A Cylinder Torque Plates and Torque Plate Bolts Part No. HD-33446-86.

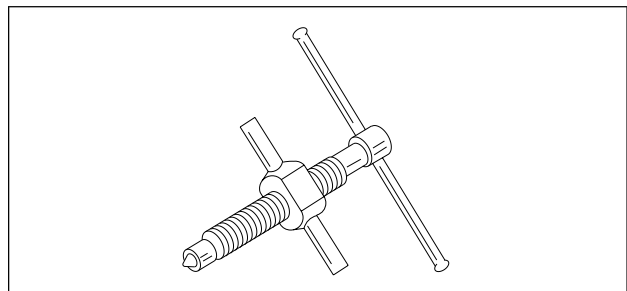


Part No. HD-33418 Universal Puller Forcing Screw

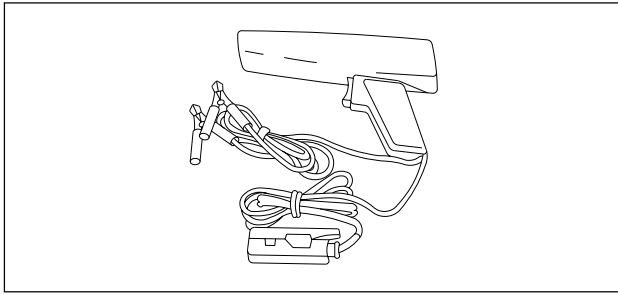


Part No. HD-33813 Inductive Timing Light

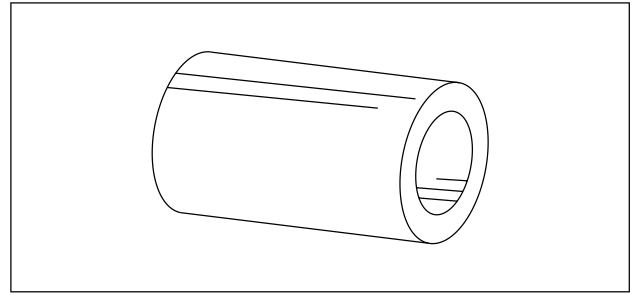


Part No. HD-34731 Shoulderless Valve Guide Installation Tool

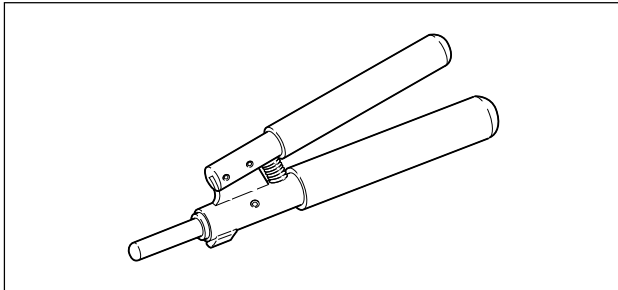


Part No. HD-34623B Piston Pin Retaining Ring Installer/Remover

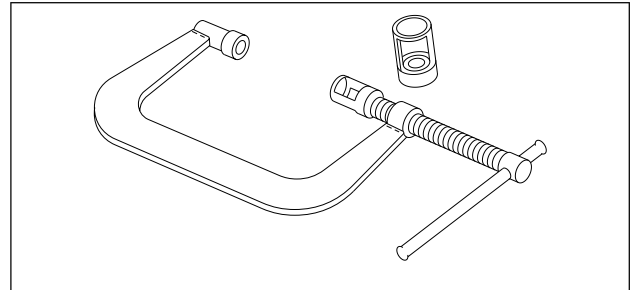


Part No. HD-34736B Valve Spring Compressor

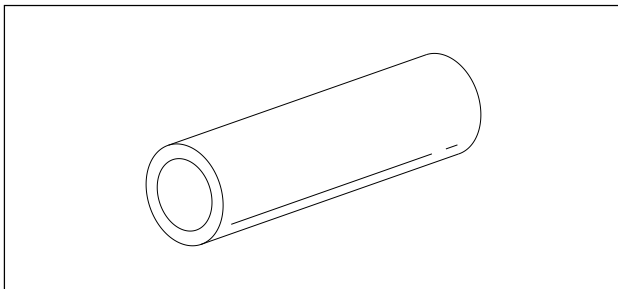


Part No. HD-34643A Shoulderless Valve Guide Seal Installer

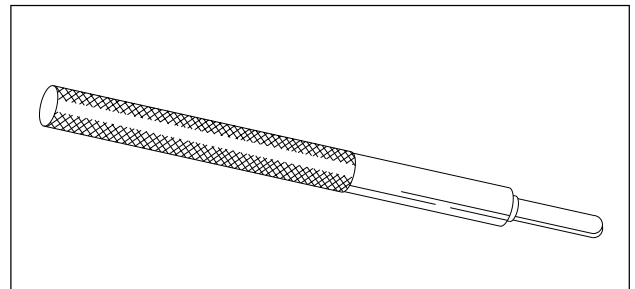


Part No. HD-34740 Driver Handle and Remover. Use with Part No. HD-34643A and art No. HD-34731.

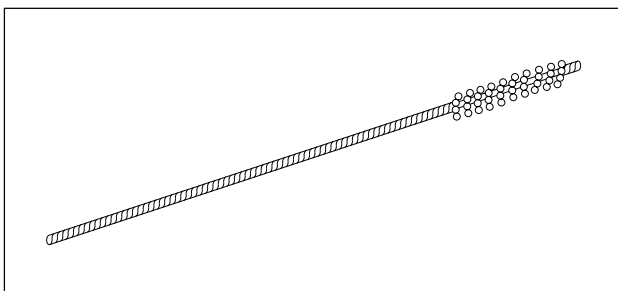


Part No. HD-34723 Valve Guide Hone (8 mm)

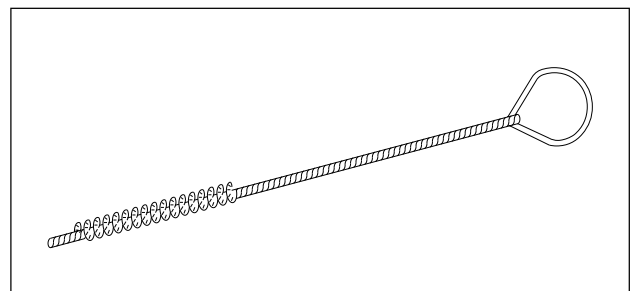


Part No. HD-34751 Nylon Valve Guide Brush

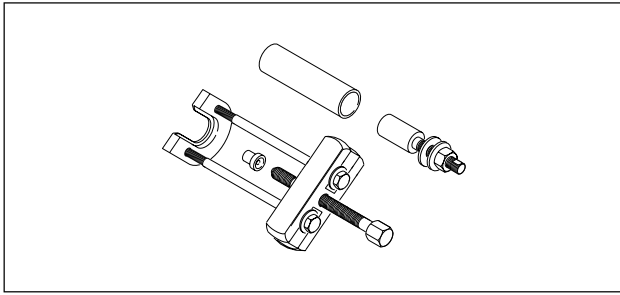


Part No. HD-34902-B Primary Bearing Race Remover/Installer

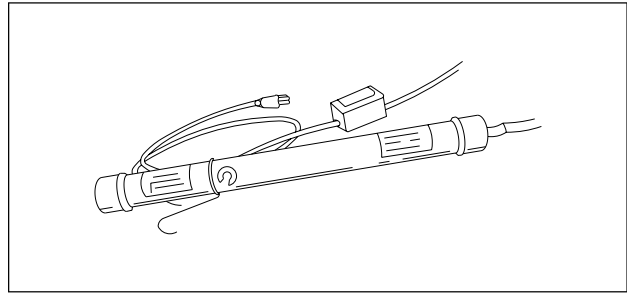


Part No. HD-35457 Black Light Leak Detector

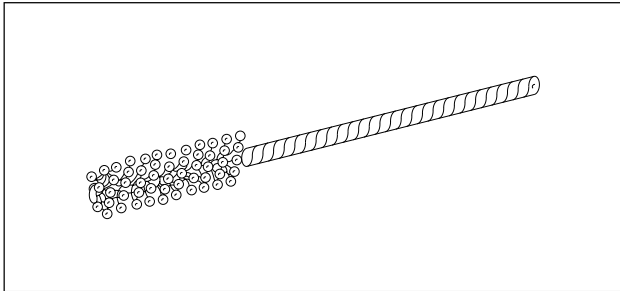


Part No. HD-35102 Wrist Pin Bushing Hone (20 mm)

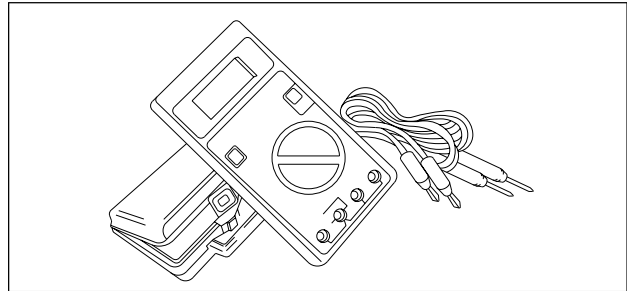


Part No. HD-35500A Digital Multi-Meter (FLUKE 23)

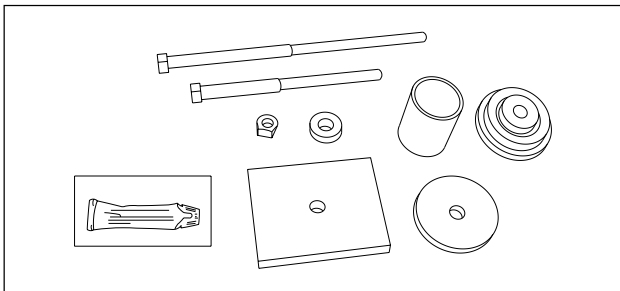


Part No. HD-35316-A Main Drive Gear Remover/Installer and Main Drive Gear Bearing Installer.

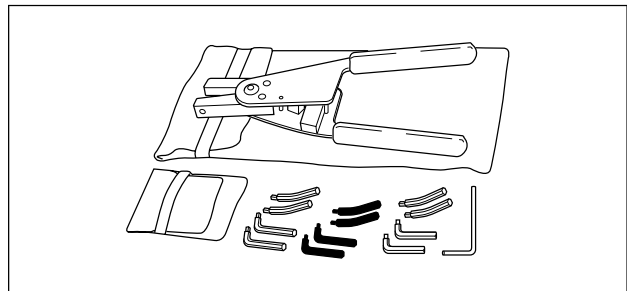


Part No. HD-35518 Internal/External Retaining Ring Pliers

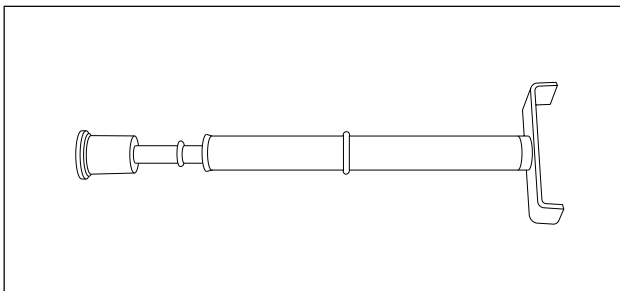


Part No. HD-35381 Belt Tension Gauge

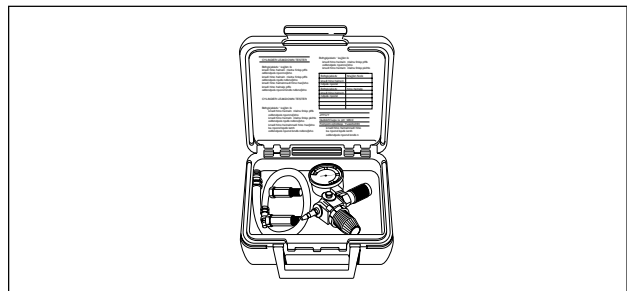


Part No. HD-35667A Cylinder Leakdown Tester

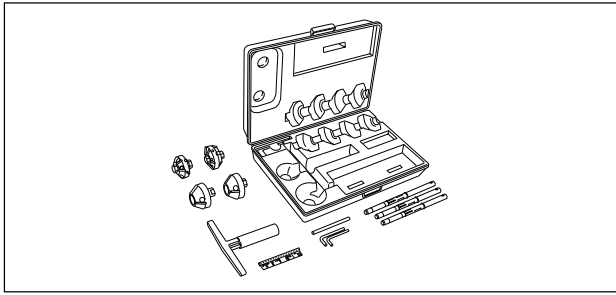


Part No. HD-35758 Neway Valve Seat Cutter Set

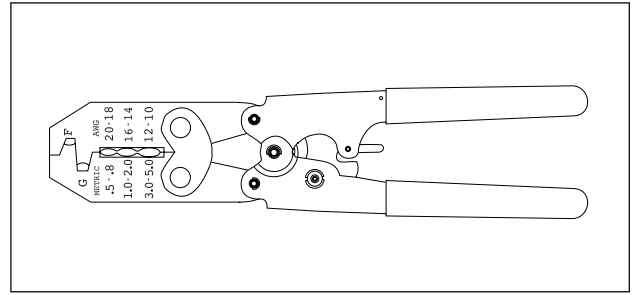


Part No. HD-38125-8 Packard Terminal Crimp Tool

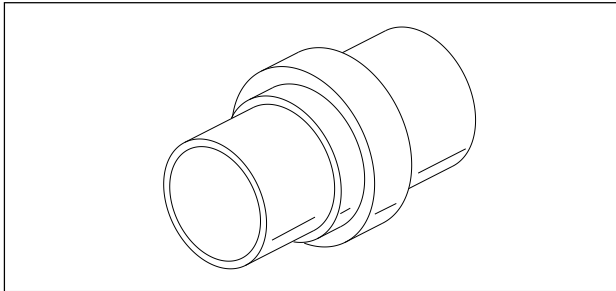


Part No. HD-37842A Inner/Outer Main Drive Gear Needle Bearing Installer

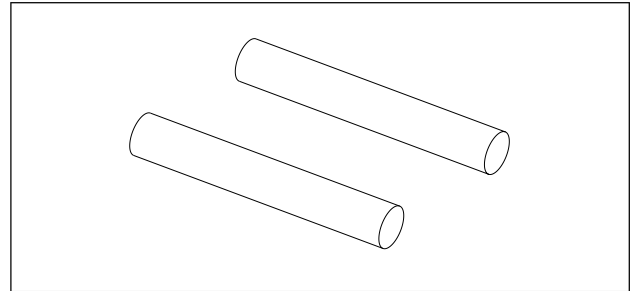


**Part No. HD-38361 Cam Gear Gauge Pin Set
(0.108 in. (2.74 mm) Diameter)**

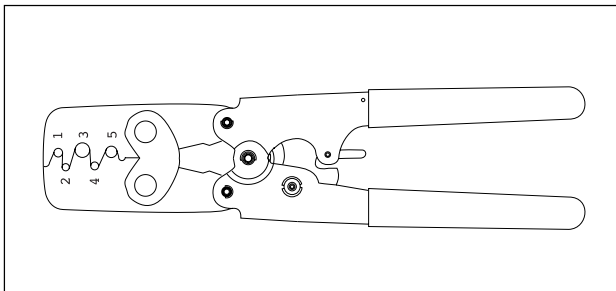


**Part No. HD-38125-6 Packard Terminal Crimp Tool
(Sealed and non-sealed connectors)**

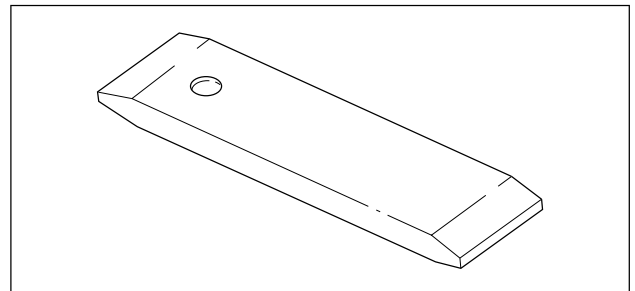


Part No. HD-38362 Sprocket Locking Link

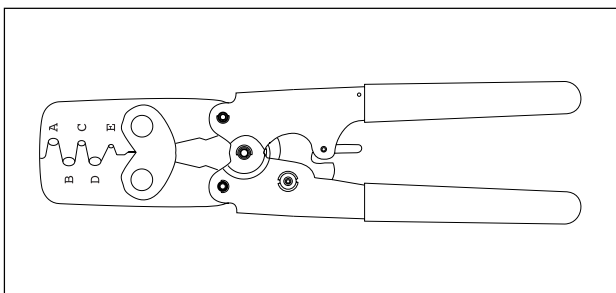


**Part No. HD-38125-7 Packard Terminal Crimp Tool
(Sealed connectors)**

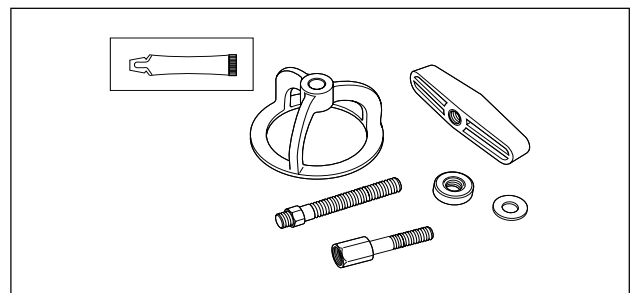


**Part No. HD-38515-A Clutch Spring Compressing Tool
and Part No. HD-38515-91 Forcing Screw.**

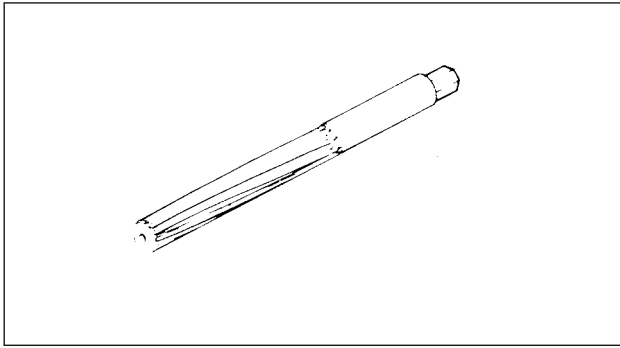


**Part No. HD-38871- 2 Reamer. Use with Part No. B-43988
Camshaft Bushing Reamer Fixture**

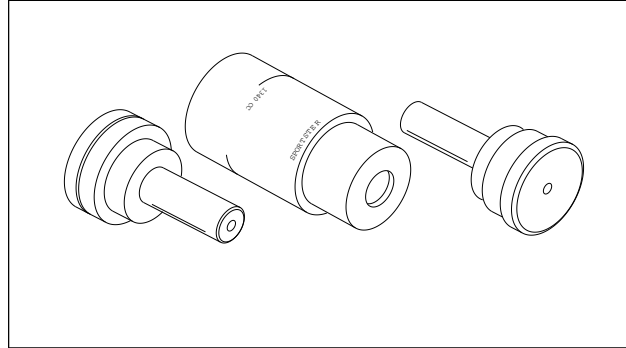


**Part No. HD-39458 Sprocket Shaft Bearing Outer
Race Installer**

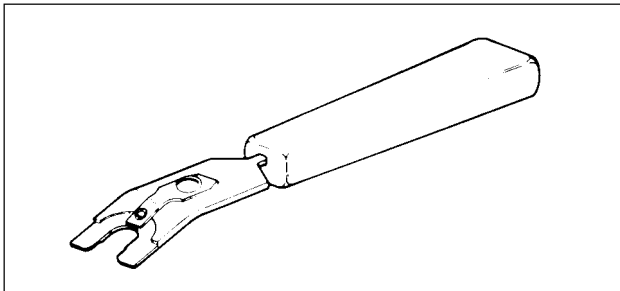


Part No. HD-39151 Shift Drum Retaining Ring Installer

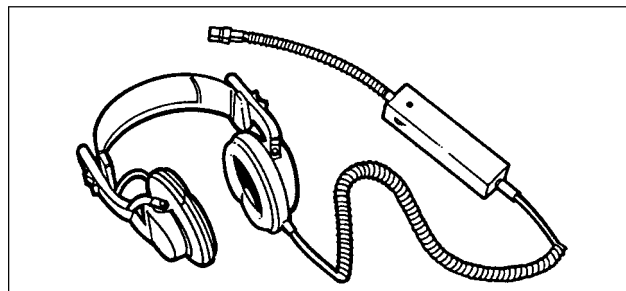


Part No. HD-39565 Engine Sound Probe

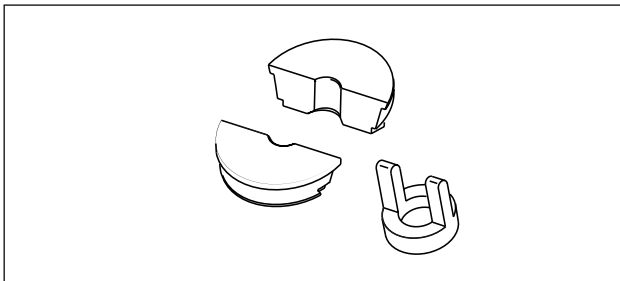


**Part No. HD-39301-A Steering Head Bearing
Race Remover**

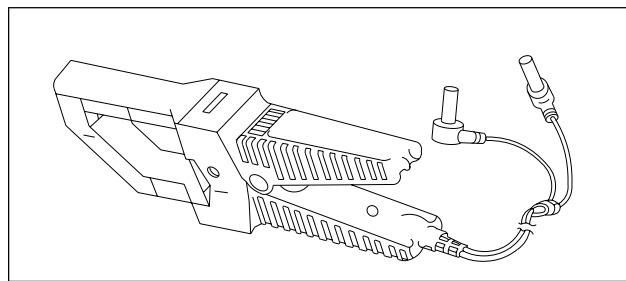


**Part No. HD-39617 Inductive Amp Probe.
Use with Part No. HD-35500A.**

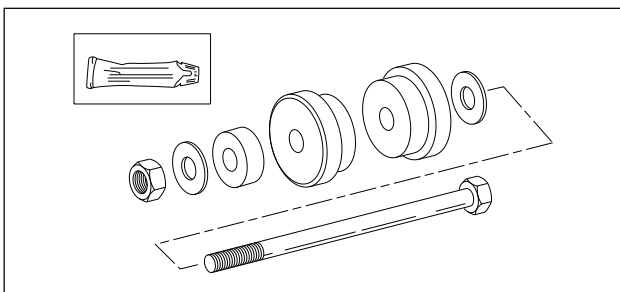


**Part No. HD-39302 Steering Head Bearing
Race Installer**

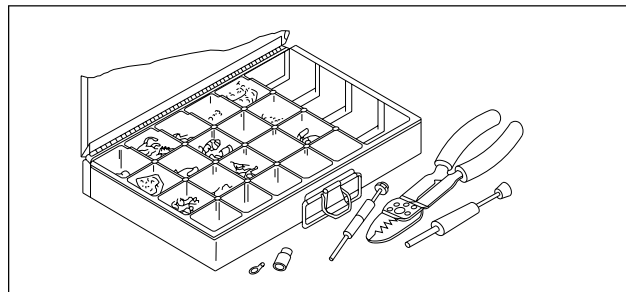


Part No. HD-39621 Electrical Terminal Repair Kit

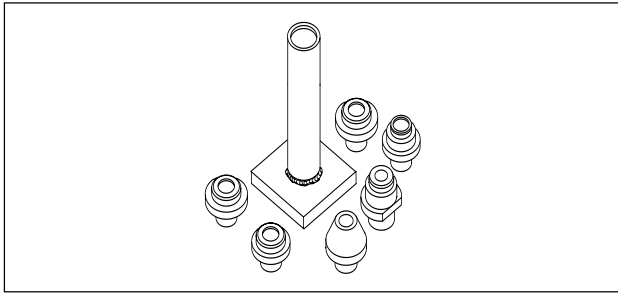


Part No. HD-39782 Cylinder Head Support

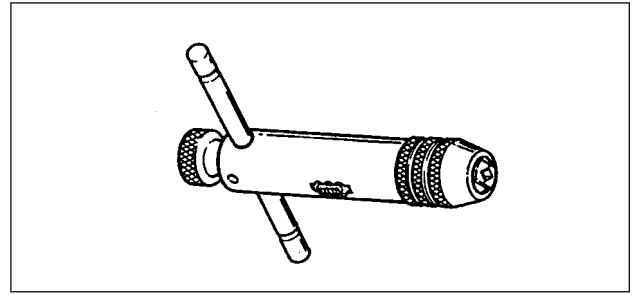


**Part No. HD-39847 Universal Ratcheting Tap/
Reamer Handle**

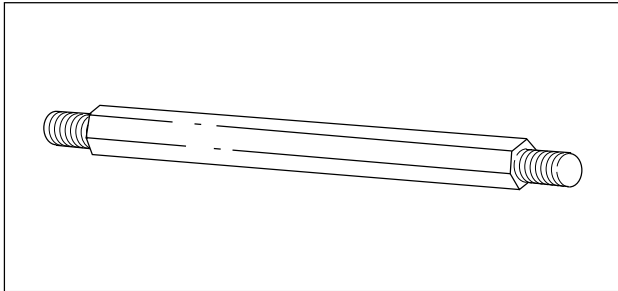


Part No. HD-39786 Cylinder Head Holding Fixture

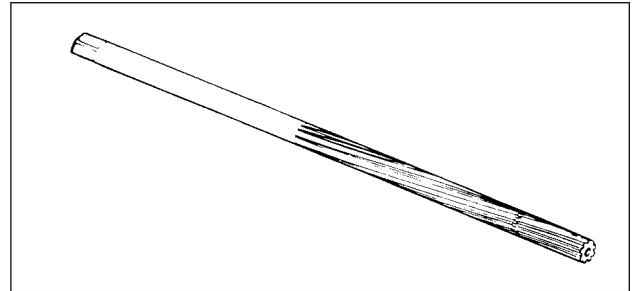


**Part No. HD-39932 (Steel) or HD-39932-CAR (Carbide)
Intake and Exhaust Valve Guide Reamer.**

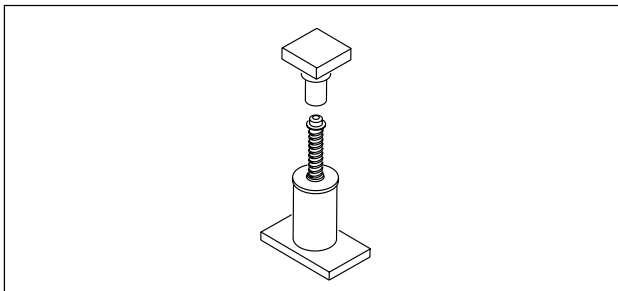


Part No. HD-39800 Oil Filter Crusher, Small

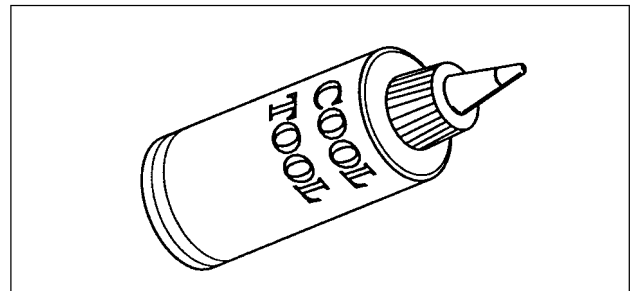


Part No. HD-39964 Reamer Lubricant (Cool Tool)

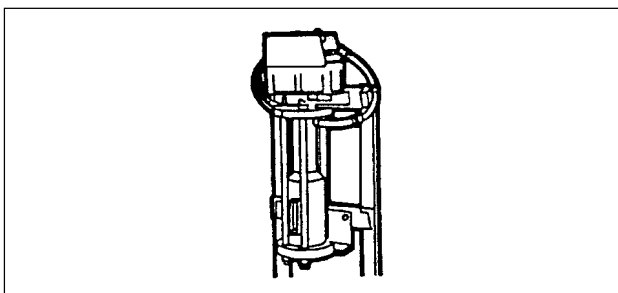


Part No. HD-39823 Oil Filter Crusher, Large

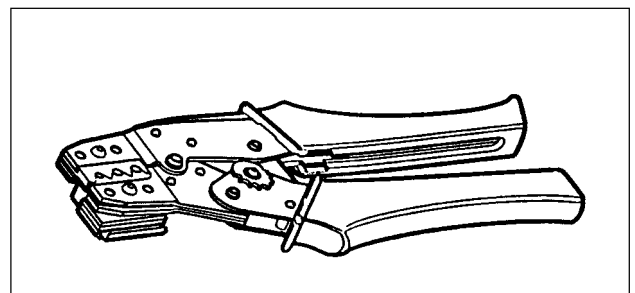


Part No. HD-39965 Deutsch Terminal Crimp Tool

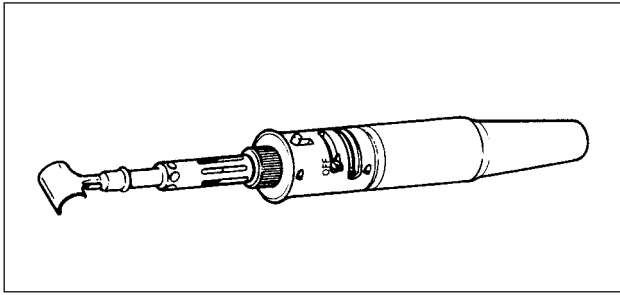


Part No. HD-39969 Ultra-Torch UT-100

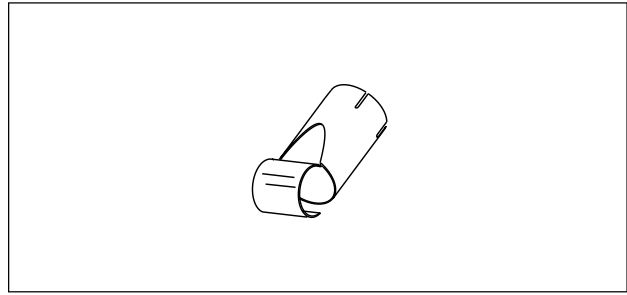


**Part No. HD-41183 Heat Shield Attachment.
Use with Part No. HD-25070.**

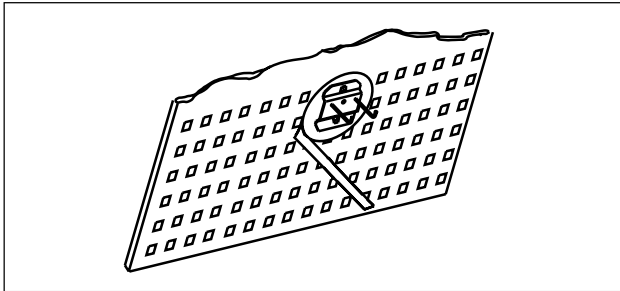


Part No. BU-44473 Tool Organizational System

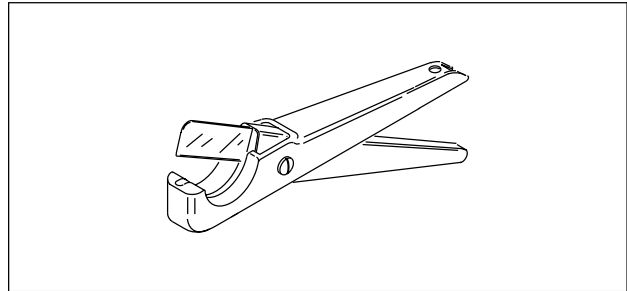


Part No. HD-41185 Hose Cutting Tool

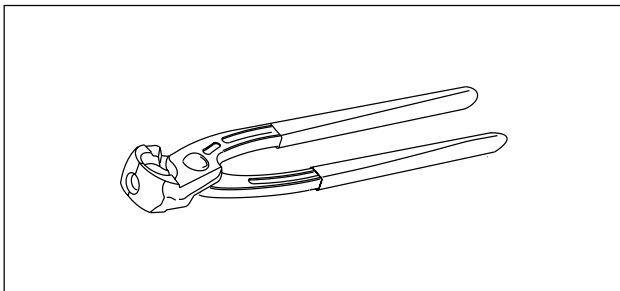


Part No. HD-41137 Hose Clamp Pliers

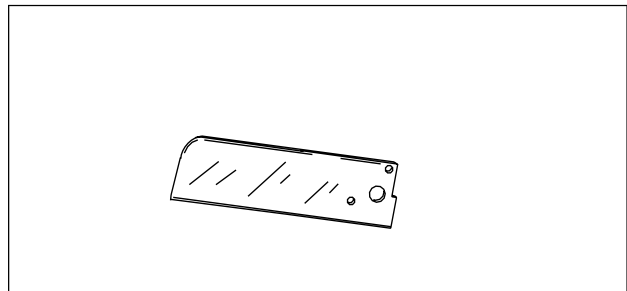


Part No. HD-41185-1 Oil Hose Cutter-Replacement Blade

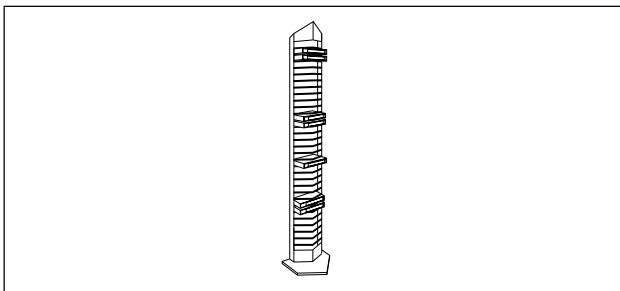


Part No. HD-41155 VHS Video Shelf

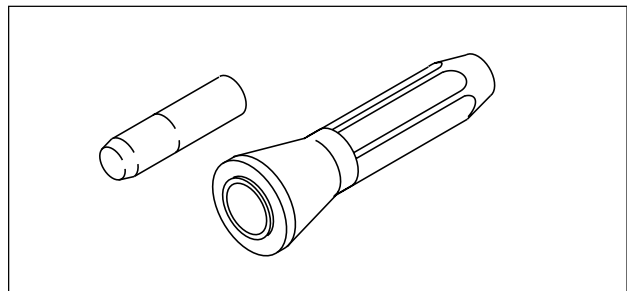


Part No. HD-41405 Main Drive Gear Seal Installer

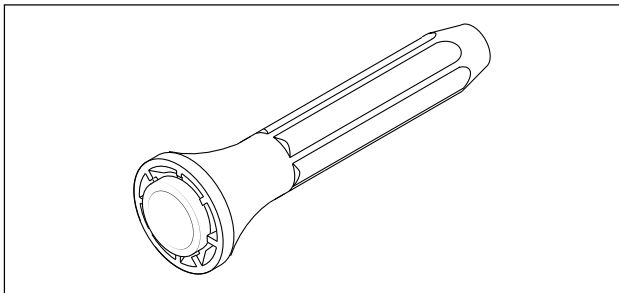


Part No. HD-41496 Main Drive Gear Seal Installer

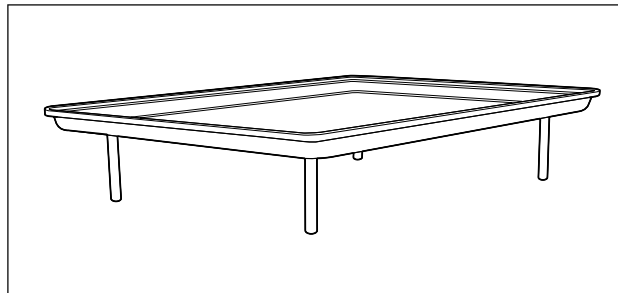


**Part No. HD-42310-150 Drip Tray.
Use with Part No. HD-42310.**

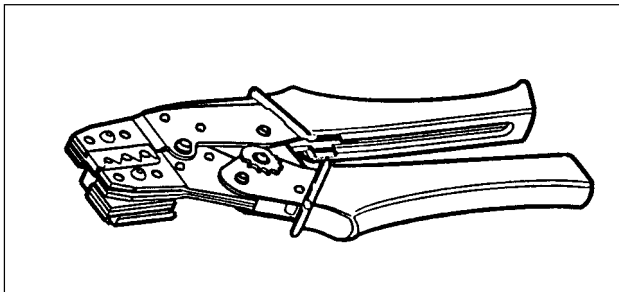


Part No. HD-41609 Amp Terminal Crimp Tool

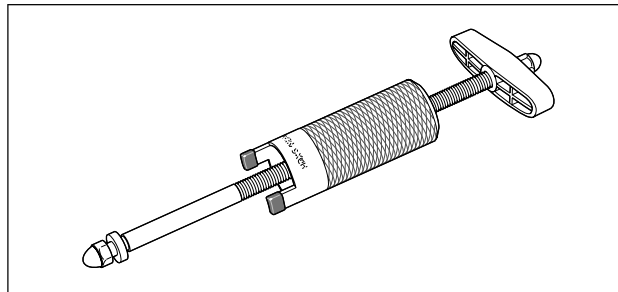


Part No. HD-42320 Piston Pin Remover/Installer

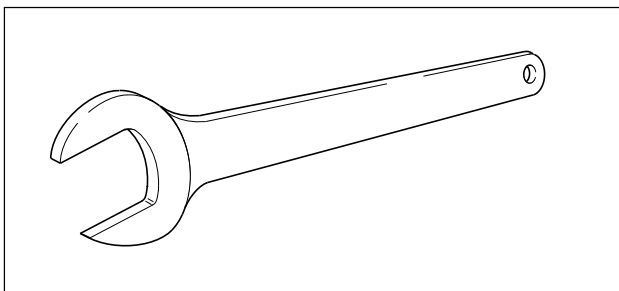


Part No. HD-41675 Oil Pressure Sending Unit Wrench

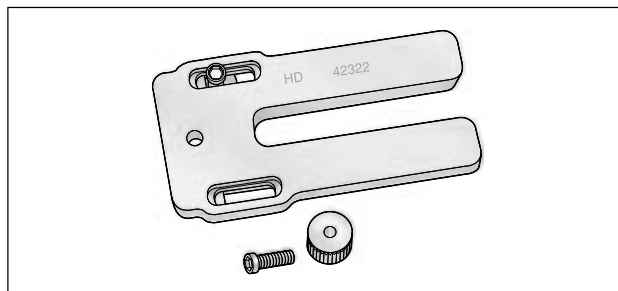


Part No. HD-42322 Piston Support Plate

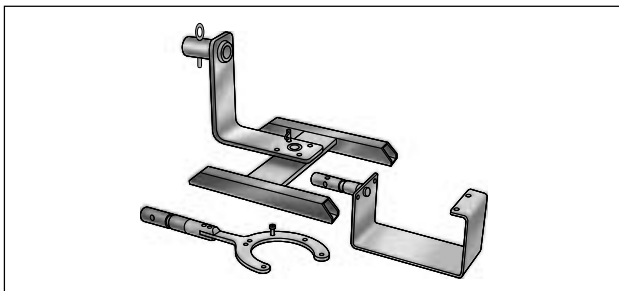


Part No. HD-42310 Engine/Transmission Stand

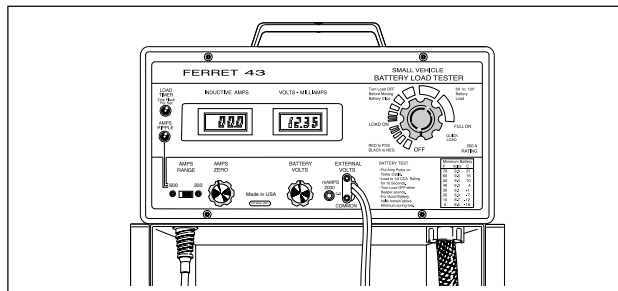


**Part No. HD-42376 Battery/Charging System
Load Tester**

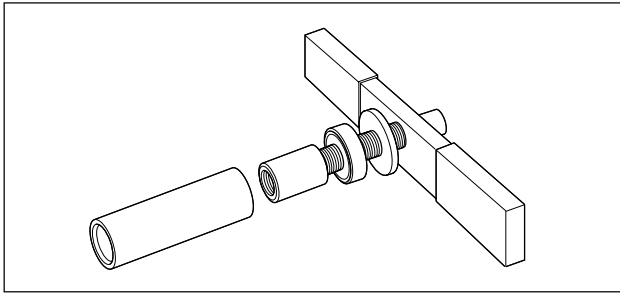


Part No. HD-42579 Sprocket Bearing/Seal Installer

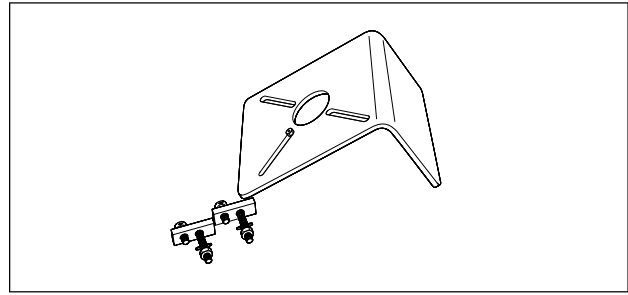


Part No. HD-44358 Flywheel Support Fixture

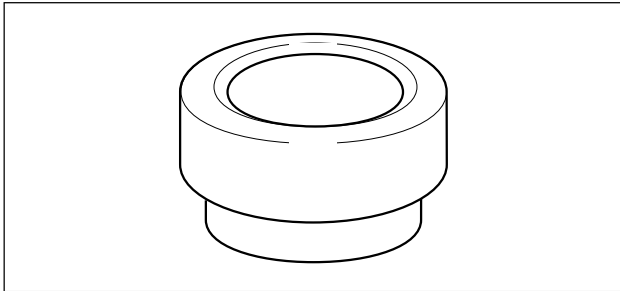


Part No. HD-42774 Sprocket Shaft Seal Installer

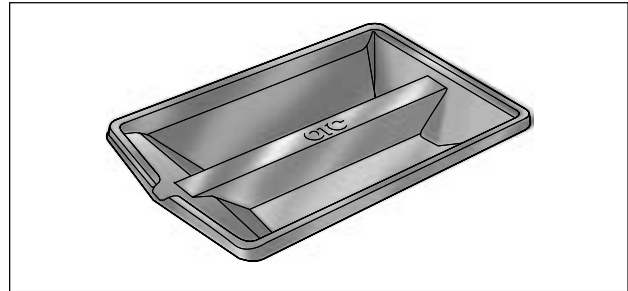


Part No. HD-43682-10 Drip pan.
Use with Part No. HD-43682 or Part No. HD-43646.

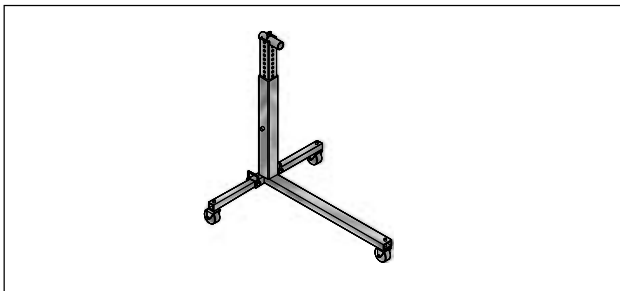


Part No. HD-43646 Engine Stand

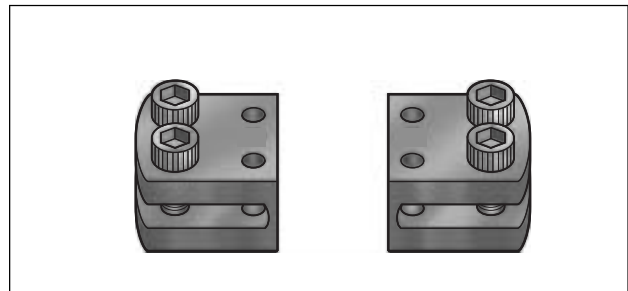


Part No. HD-44069 Timkin Snap ring remover and installer. Use with Part No. HD-44404.

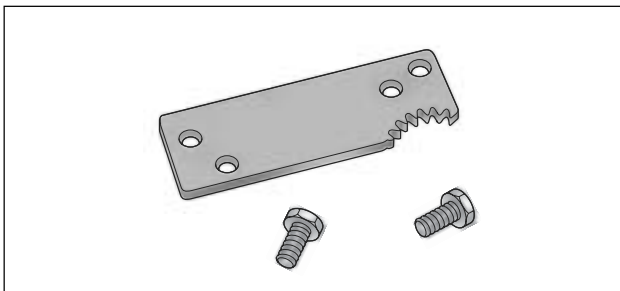


Part No. HD-43984 Crankshaft Locking Tool

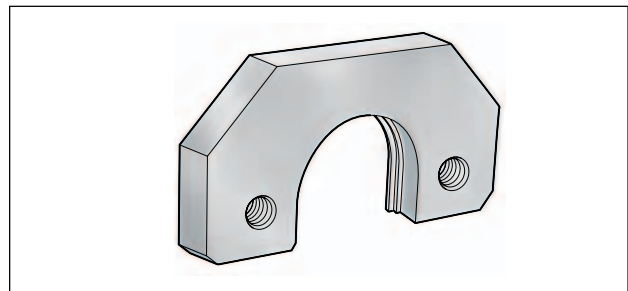


Part No. HD-44404 Timkin Bearing Remover. Use with Part No. HD-44069.

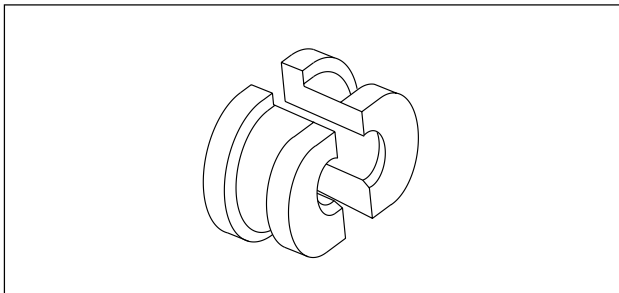


Part No. HD-94547-101 Crankshaft Bearing Outer Race Remover. Use with Part No. HD-94547-102.

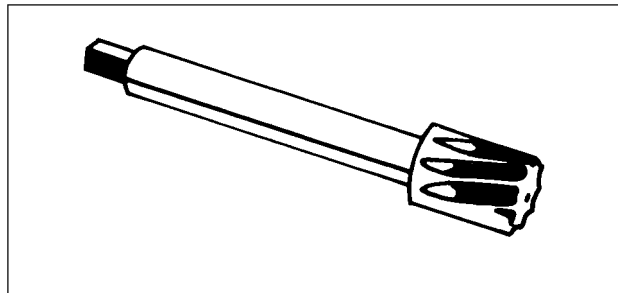


Part No. HD-94803-67 Intake Camshaft Bushing Reamer

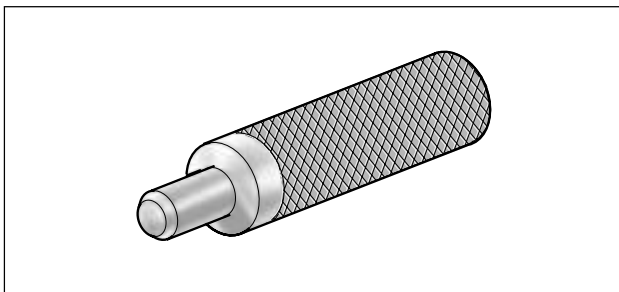


Part No. HD-94547-102 Drive Handle. Use with Part No. HD-94547-101.

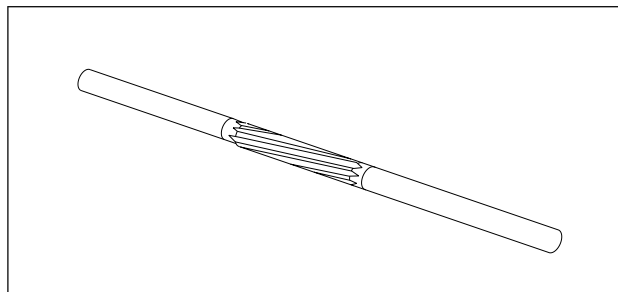


Part No. HD-94804-57 Rocker Arm Bushing Reamer

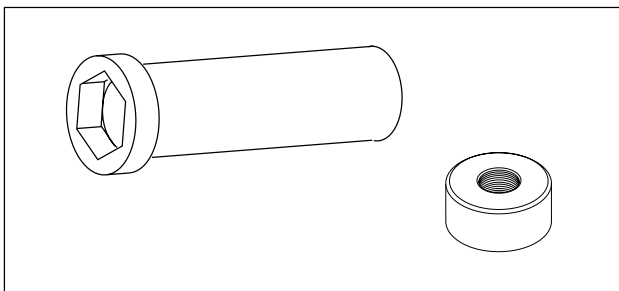


**Part No. HD-94660-37B Mainshaft Locknut Wrench
Use with Part No. B-43982.**

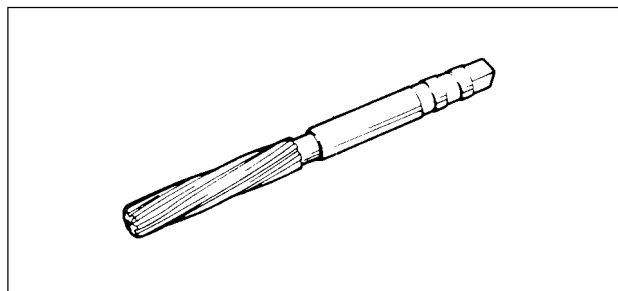


**Part No. HD-94812-1 Pinion Shaft Bushing Reamer.
Use with Part No. HD-94812-87.**

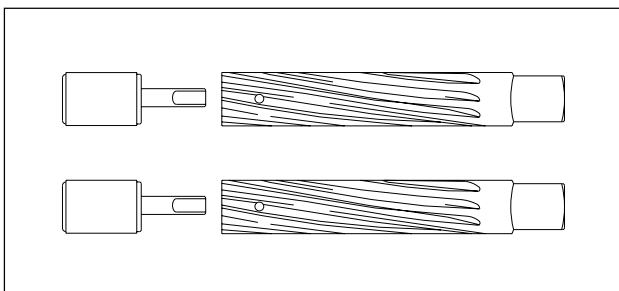


Part No. HD-94800-26A Connecting Rod Bushing Reamers and Pilots

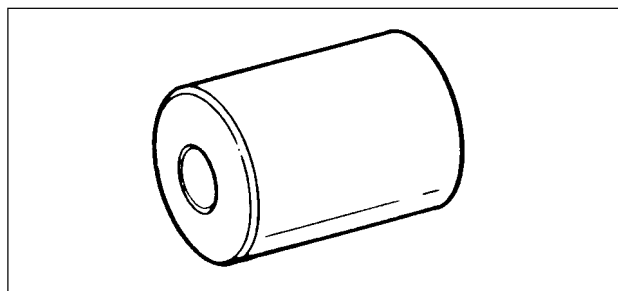


**Part No. HD-94812-87 Pinion Shaft Reamer Pilot.
Use with Part No. HD-94812-1.**

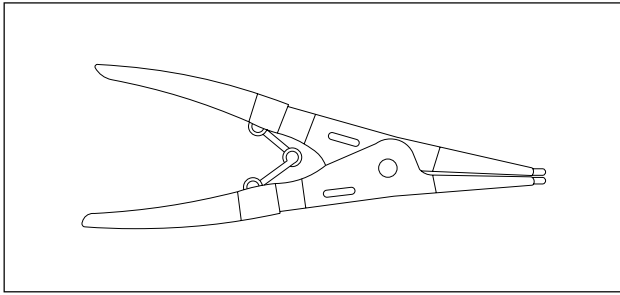


Part No. HD-95017-61 Large External Retaining Ring Pliers

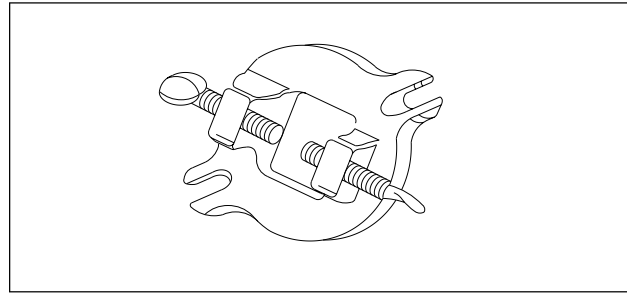


Part No. HD-95952-33B Connecting Rod Clamping Tool

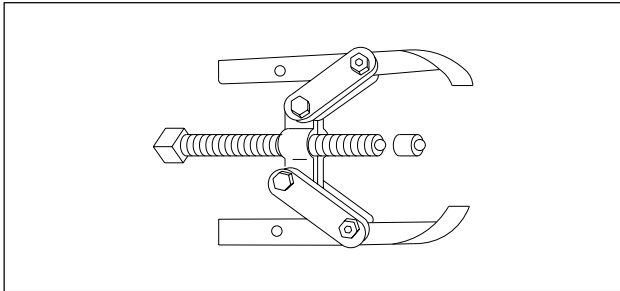


Part No. HD-95635-46 All-Purpose Claw Puller

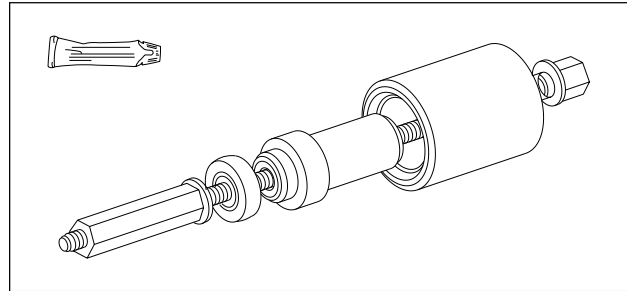


Part No. HD-95970-32D Piston Pin Bushing Tool

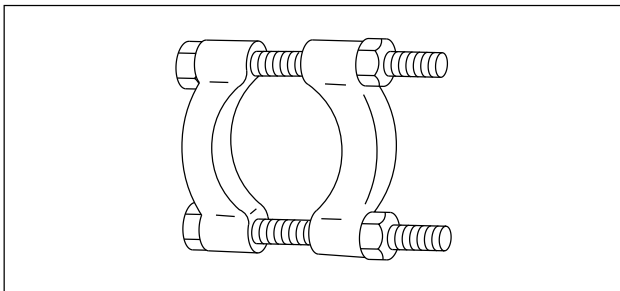


Part No. HD-95637-46A Wedge Attachment for Claw Puller. Use with Part No. HD-95635-46.

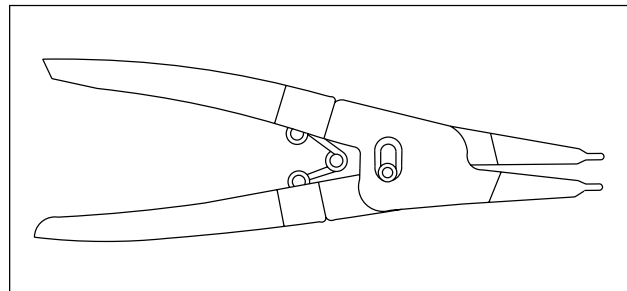


Part No. HD-96215-49 Small Internal Retaining Ring Pliers

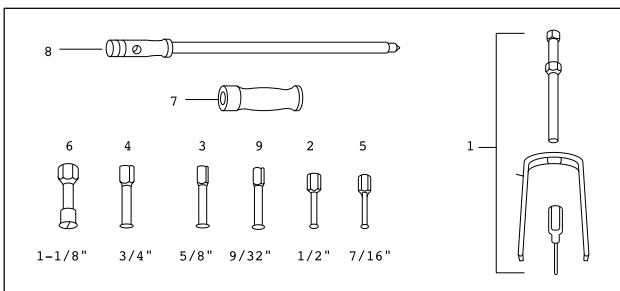


Part No. HD-95760-69A Bushing/Bearing Puller Tool Set
Set includes items 1-7. Items 8 (HD-95769-69), 9 (HD-95770-69) and 10 (HD-95771-69) are optional.

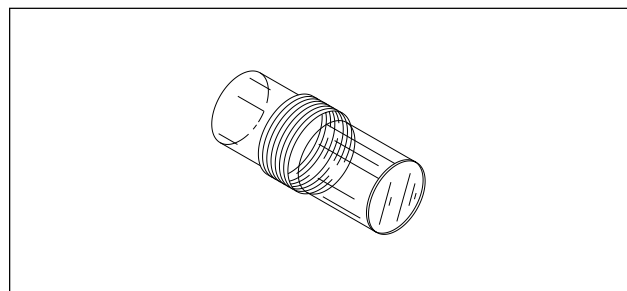


Part No. HD-96295-65D Timing Mark View Plug.
Use with Part No. HD-33813.

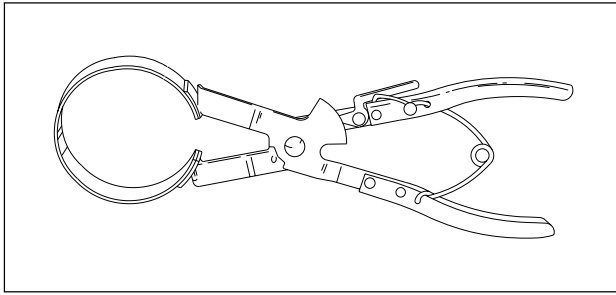


Part No. HD-96333-51C Piston Ring Compressor

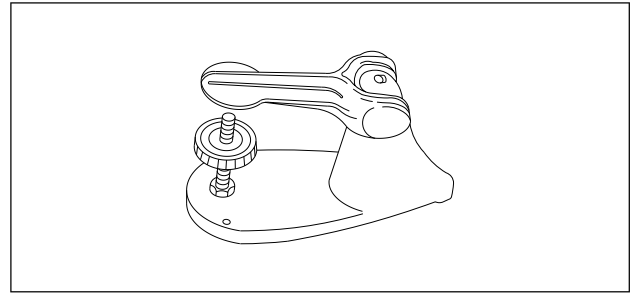


Part No. HD-96796-47 Valve Spring Tester

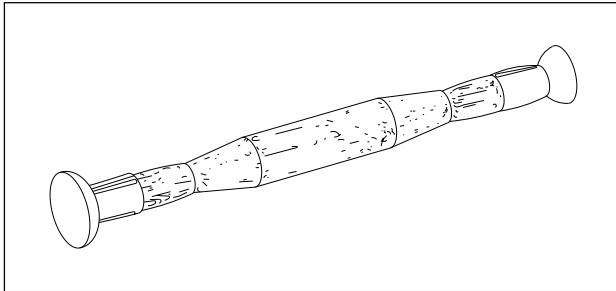


Part No. HD-96550-36A Valve Lapping Tool

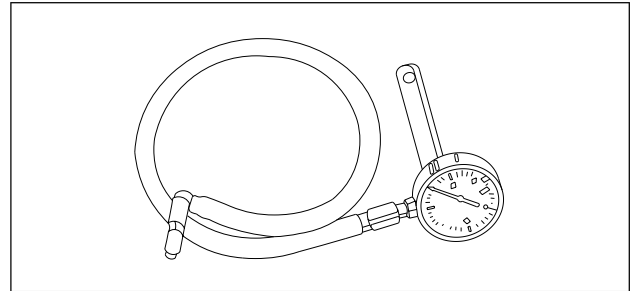


Part No. HD-96921-52B Oil Pressure Gauge

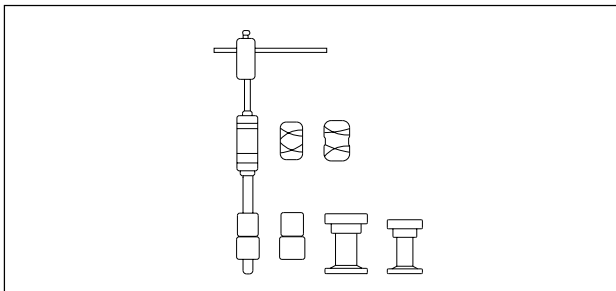


Part No. HD-96710-40B Crankcase Main Bearing Lapping Tool

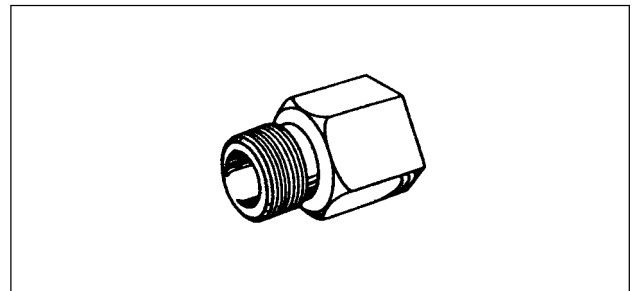


**Part No. HD-96921-58 Oil Pressure Gauge Adapter.
Use with Part No. HD-96921-52B.**

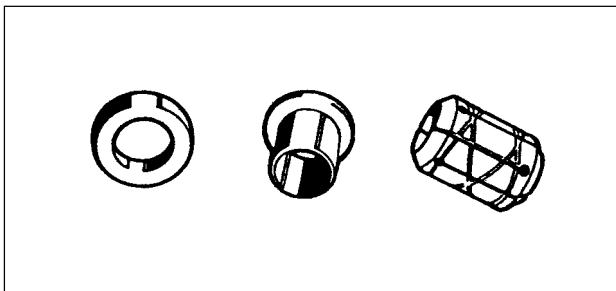

Part No. HD-96718-87 Pinion Bearing Outer Race Lapping Kit

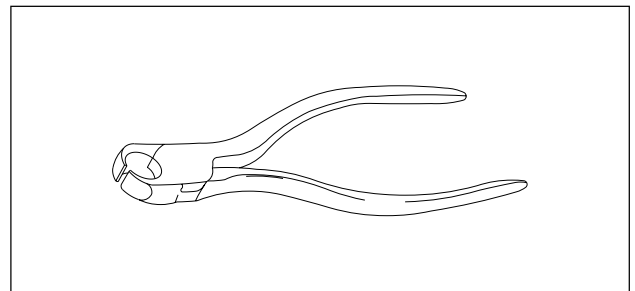

Part No. HD-97087-65B Hose Clamp Pliers

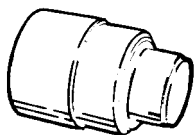


Part No. HD-97273-60 Camshaft Bushing Installer

HD-47250



Part No. HD-47250 Intake Manifold Wrench

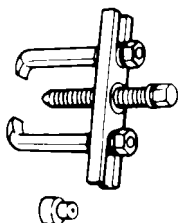


Part No. HD-97292-61 Two Claw Puller

HD-47258




Part No. HD-47258 Rocker Cover Wrench

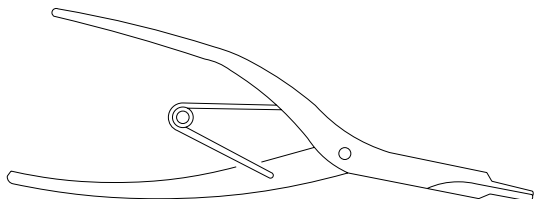

**Part No. J-5586 Transmission Shaft
Retaining Ring Pliers**

HD-47248



Part No. HD-47248 Rocker Housing Wrench